

CYLINDER HEAD COVER REMOVAL/ DISASSEMBLY


REMOVAL

Remove the fuel tank (page 4-3).

Remove the upper engine hanger plate bolts and the plates.

Disconnect the decompressor cable from the upper arm.


Remove the oil bolt with the two sealing washers.
Remove the valve adjusting hole covers.

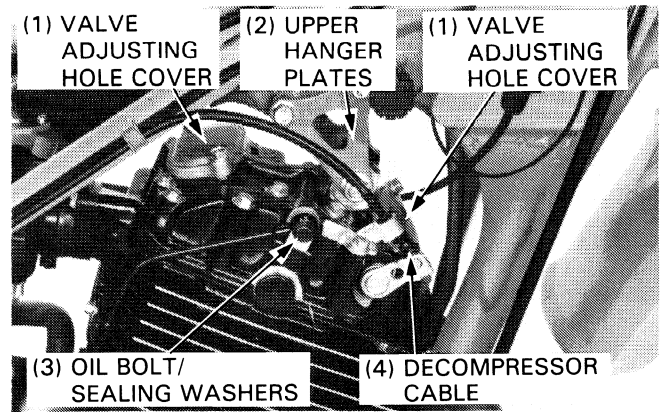

Remove the cylinder head cover bolts, cover and dowel pins.


NOTE

- Loosen the bolts in 2 or 3 steps in a crisscross pattern, starting with the center bolt.

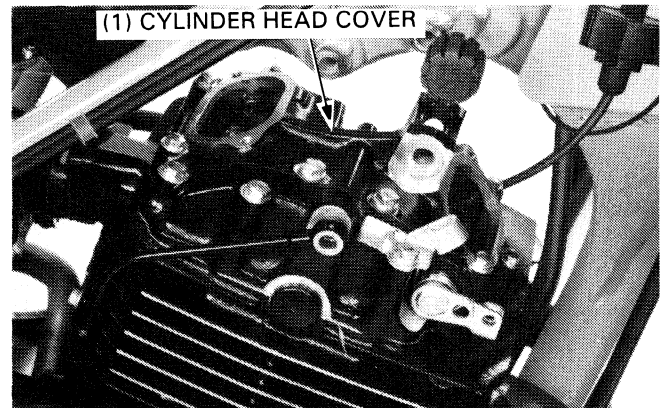

DISASSEMBLY

Remove the dowel pin and the decompressor shaft.

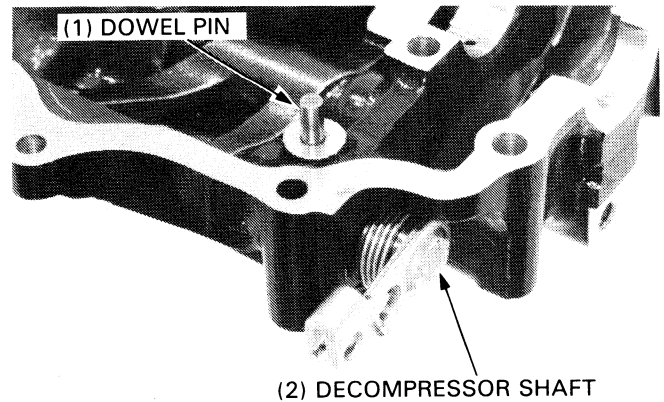

Groove each rocker arm shaft dowel pin with a grinder and drive the dowel pins out using a screwdriver as shown.

Remove the rocker arm shafts and rocker arms from the cylinder head cover.

