

## CYLINDER/PISTON


### CYLINDER REMOVAL

Remove the cylinder head (Section 6).


Remove the gasket, dowel pins, and cam chain guide.

#### NOTE


- Keep the cam chain from falling into the crankcase when removing the cylinder.

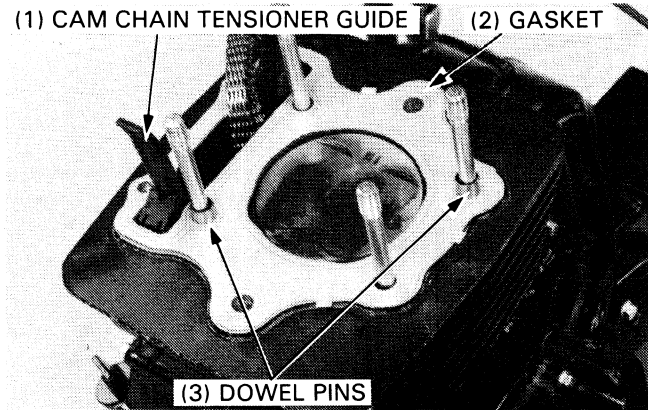

Remove the cylinder mount bolts.

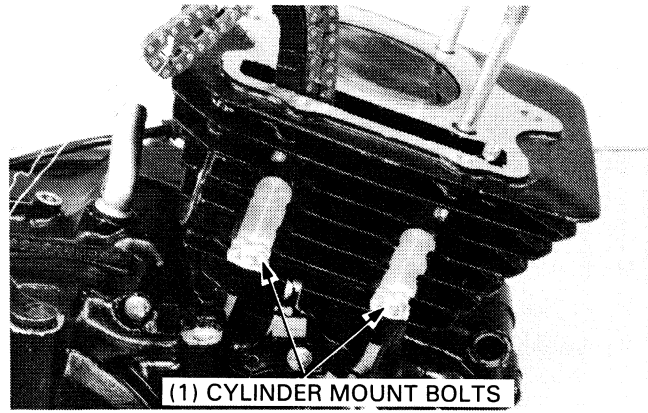

Remove the cylinder, gasket and dowel pins.

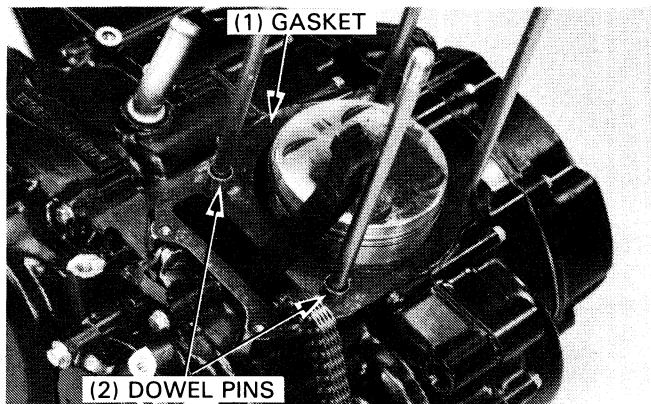

Clean off any gasket material from the cylinder surface.

#### NOTE

- Be careful not to damage the gasket surface.

