


## CLUTCH/OIL PUMP/KICK STARTER


Remove the gasket and dowel pins.

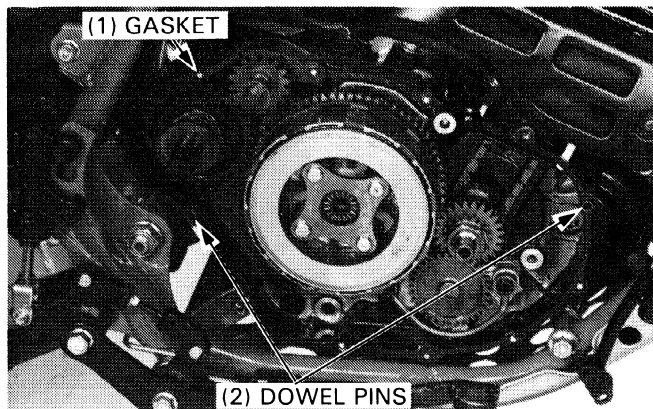


## CLUTCH LIFTER REMOVAL

Remove the clutch lifter piece.

Unhook the return spring from the spring pin.

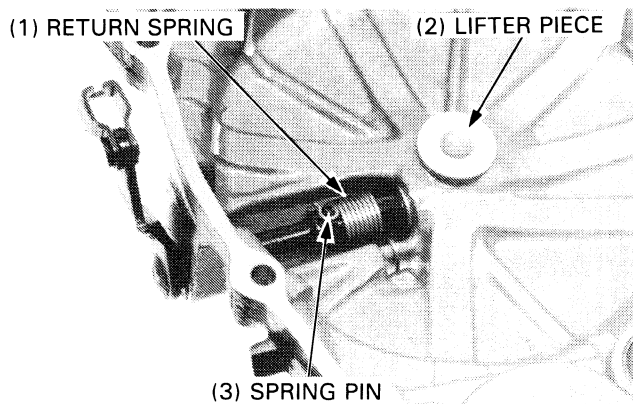

Drive in the spring pin until it is flush with the lifter shaft surface and remove the lifter arm shaft and return spring.

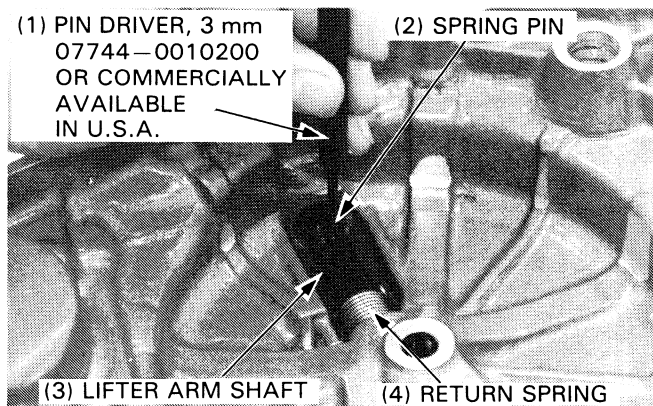

Drive out the spring pin from the lifter arm shaft and discard it.

