


CLUTCH/OIL PUMP/KICK STARTER


Install a new crankshaft oil seal with its lip facing down.
Install the snap ring.

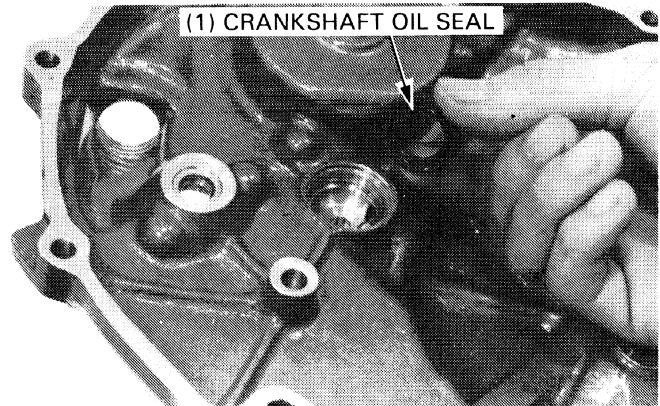

OIL FILTER SCREEN CLEANING

Remove the oil filter screen and clean it.

Install the oil filter screen with its dot mark facing up.

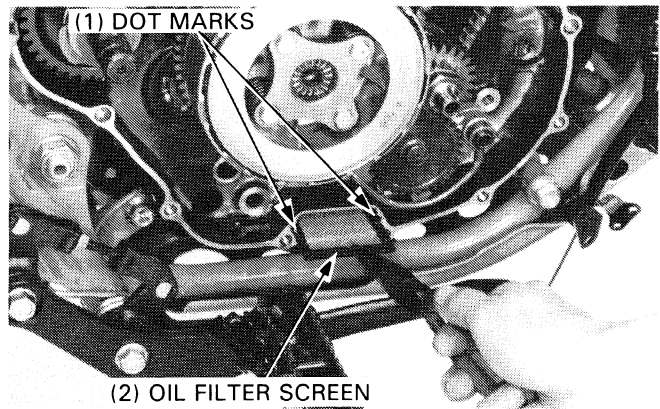


CLUTCH

REMOVAL

Remove the clutch bolts, lifter plate and springs.

NOTE

- Loosen the bolts in a crisscross pattern in 2-3 steps.

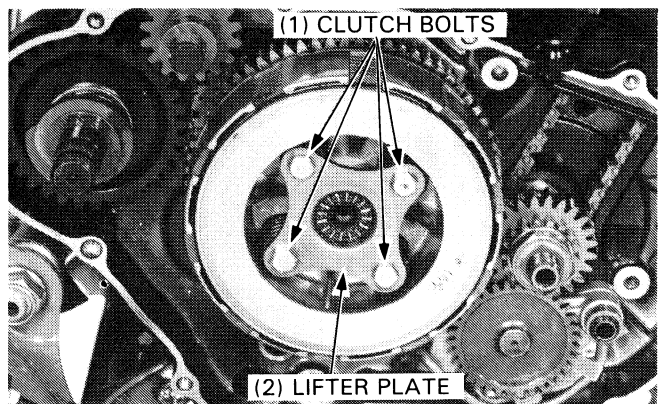

Remove the snap ring, clutch release bearing and washer from the lifter plate.

