



Install new O-rings onto the ends of the oil cooler pipes and connect them to the right crankcase cover using the four bolts.

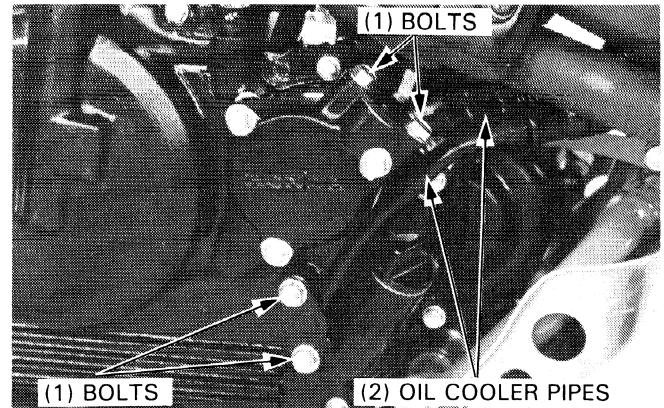

Connect the clutch cable to the clutch lifter arm.

Make sure that the sealing washers are in good condition and connect the oil pipe to the right crankcase cover using the two sealing washers and oil bolt.

TORQUE: 12–16 N·m (1.2–1.6 kg·m, 9–12 ft·lb)

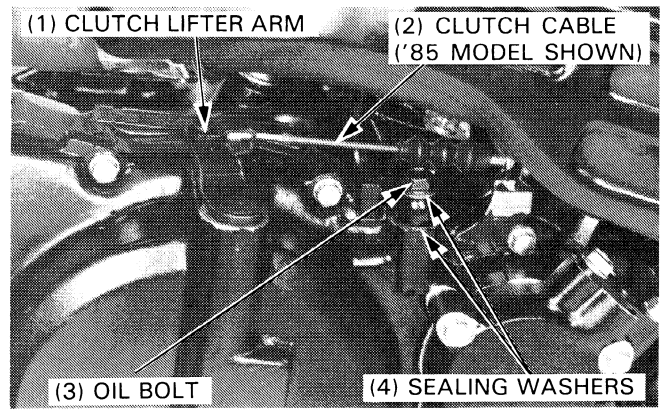

Connect the decompressor cable to the cam follower shaft arm and install the cable holder onto the right crankcase cover using the bolt.

Install the kick starter arm aligning its slit with the punch mark on the starter shaft.
Tighten the kick starter arm pinch bolt.

Fill the crankcase with the recommended oil (page 2-2).
Adjust the clutch cable (page 3-16) and the decompressor cable (page 3-6).

