



LEFT CRANKCASE COVER REMOVAL

Remove the gearshift pedal bolt and pedal

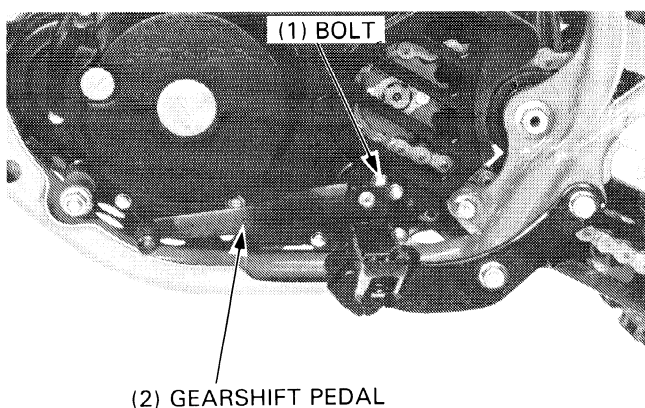


Remove the drive sprocket cover bolts and cover.

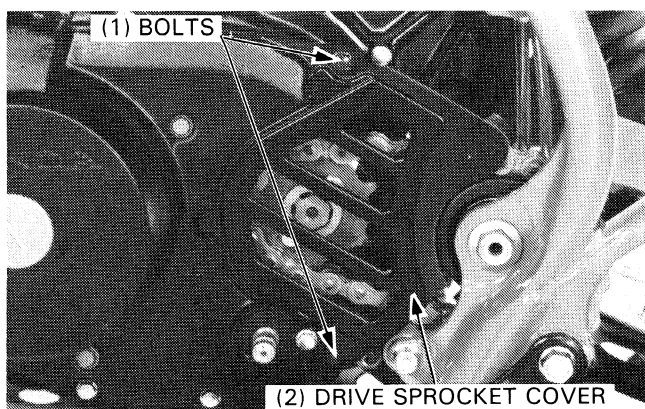

Loosen the drive chain adjuster and remove the drive chain (page 3-9).

Remove the drive chain guide.

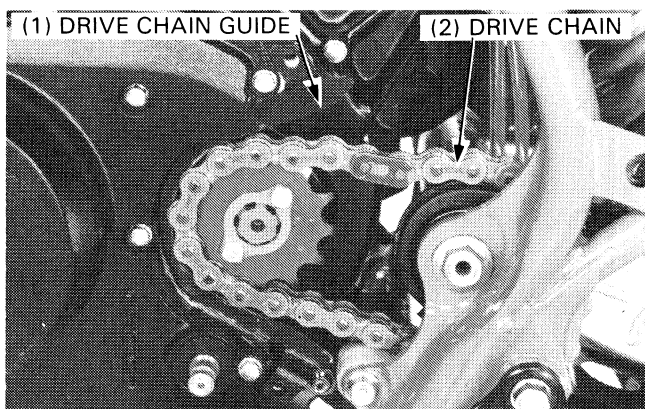

Disconnect the alternator and pulse generator wire couplers and the connector.

