



Remove the left crankcase cover bolts and cover.

Remove the dowel pins and gasket.

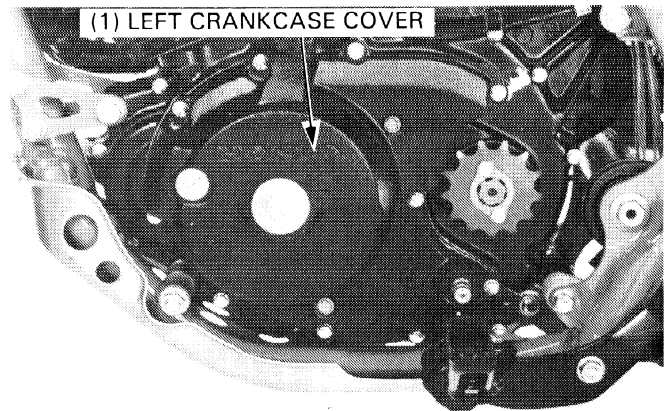

Check the gearshift shaft oil seal on the left crankcase cover for wear or damage; replace if necessary.

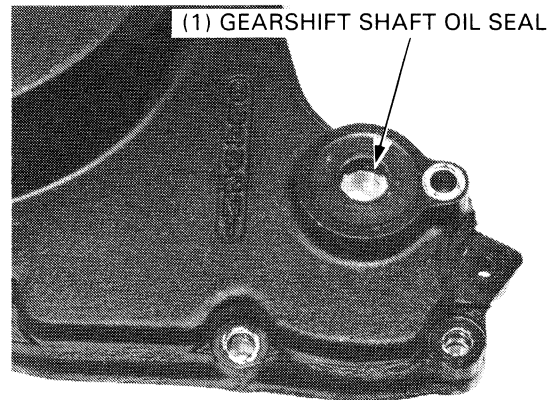


## **ALTERNATOR**

### **STATOR/PULSE GENERATOR REMOVAL**

Remove the wire clamp by removing the bolt.

Remove the pulse generator mounting screws and remove the pulse generator.

Remove the three stator bolts and stator.

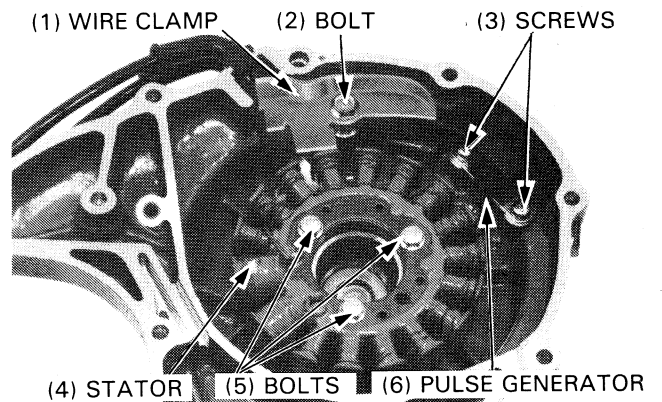

### **FLYWHEEL REMOVAL**

Hold the flywheel with the flywheel holder and remove the flywheel bolt.

