

Place the throttle housing on the handlebar and loosely install the holder and screws.

Align the lower end of the throttle housing with the punch mark on the handlebar, and tighten the forward screw first, then tighten the rear screw.

Inspect the following after installing the handlebar:

- Clutch lever free play (page 3-16).
- Throttle lever free play and return (page 3-7).
- Operation of parking brake lever (page 3-14).
- Function of handlebar switch.
- Operation of front brake lever (page 3-13).

## THROTTLE HOUSING

### DISASSEMBLY

Remove the three throttle housing cover screws and the cover. Remove the gasket.

Loosen the throttle cable adjuster.

Bend down the lock washer tab and remove the nut and lock washer.

Disconnect the throttle cable from the throttle arm.

Remove the throttle arm, spring and throttle lever from the throttle housing.

### ASSEMBLY

Connect the throttle cable to the throttle arm.

Install the throttle lever and spring in the housing.

Install the throttle arm onto the throttle lever by aligning their flats.

Hook the spring end to the throttle arm using a wire or small hook.

