

CAUTION

- *Do not inflate the tire with more than 1.4 kg/cm² (20 psi) of air.*

If the tire does not seat on the rim with 1.4 kg/cm² (20 psi) of air pressure, release the air from the tire and apply water to the tire bead and bead seating surface of the rim.

Then, inflate the tire with air again.

Deflate the tire. Wait 1 hour, install the valve core in the valve stem and inflate the tire to the specified pressure.

	Recom- mended pressure	Standard tire circum- ference
Front	4.0 psi (28 kPa, 0.28 kg/cm ²)	1,901 mm (74.8 in)
Rear	3.0 psi (21 kPa, 0.21 kg/cm ²)	1,734 mm (68.3 in)

NOTE

- The rear tires must have the same circumference for proper handling.


Check for air leaks and install the valve cap.

FRONT WHEEL INSTALLATION

Install the front wheel and hub.

If the axle holder has been removed, loosely install the holder with the "UP" mark facing up.

Insert the axle into the fork slider leg and hub and loosely tighten the axle.

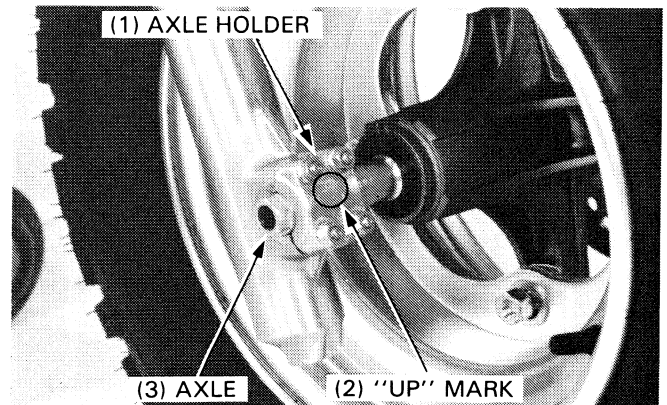

Install the front brake caliper over the disc and on the fork slider being careful not to damage the pads.

Temporarily install the brake caliper bracket mount bolts.

