


## REAR WHEELS


Remove the O-ring from the axle.

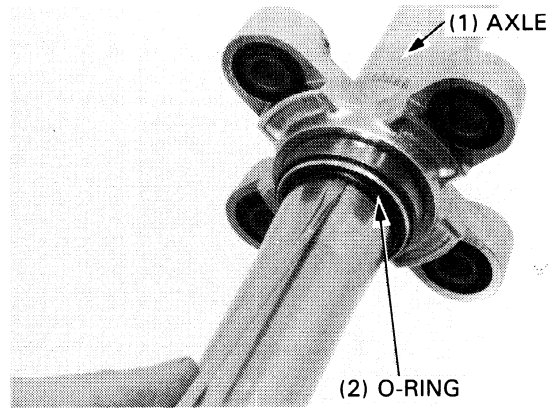

## INSPECTION


Place the axle in V-blocks and measure the runout.

**SERVICE LIMIT: 3.0 mm (0.12 in)**

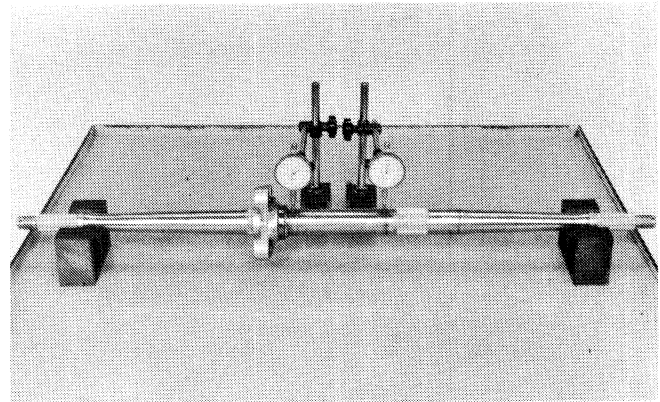

## INSTALLATION

Place a new O-ring on the axle and install the axle from the left side.

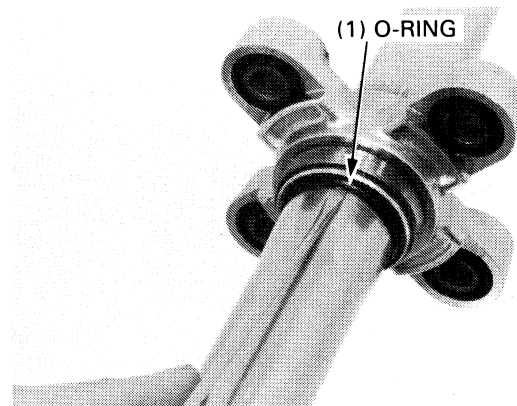

Install a new O-ring in the groove in the brake disc hub.  
Install the brake disc hub.

### WARNING

- *Grease or oil on the disc will reduce stopping power. Clean the disc with a high quality brake degreaser if oil or grease gets on the disc.*

