

REAR SUSPENSION

SPRING REMOVAL


Hold the lower shock mount in a vise with soft jaws or a shop towel and loosen the lock and adjusting nuts.

CAUTION


- *Be careful not to damage the hose connection with the vise.*

NOTE

- The pin spanners are optional tools.

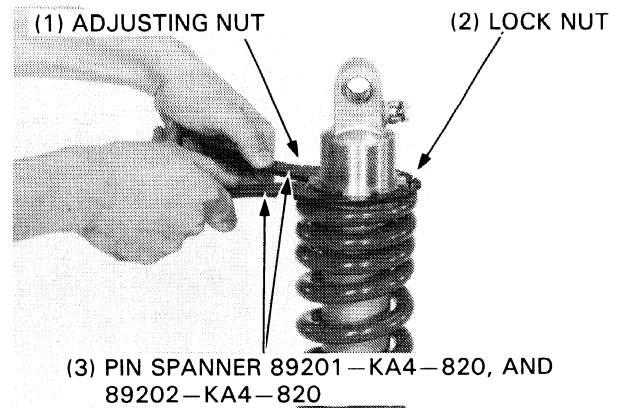


Remove the spring seat stopper, spring seat and spring.

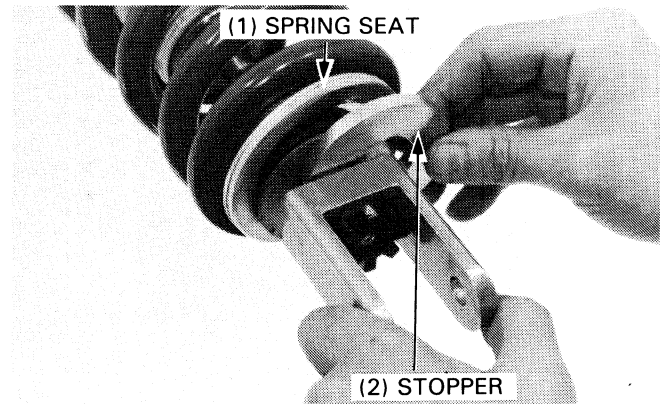

SPRING INSPECTION

Measure the spring free length.

SERVICE LIMIT: 224.7 mm (8.85 in)

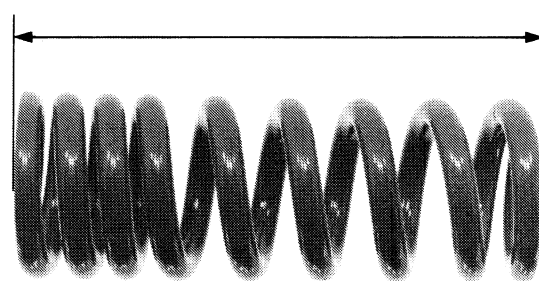

DISASSEMBLY

Remove the reservoir valve cap.

Depress the Schrader valve to release the nitrogen from the reservoir.

CAUTION

- *Point the reservoir charging valve away from you when discharging the nitrogen pressure.*
- *Do not remove the valve core before discharging the nitrogen pressure.*

