

BRAKE FLUID REPLACEMENT/BLEEDING

BRAKE FLUID DRAINING



WARNING

- *A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.*

CAUTION

- *Do not allow foreign material to enter the system when filling the reservoir.*
- *Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.*

With the fluid reservoir parallel to the ground, remove the reservoir cover and diaphragm.

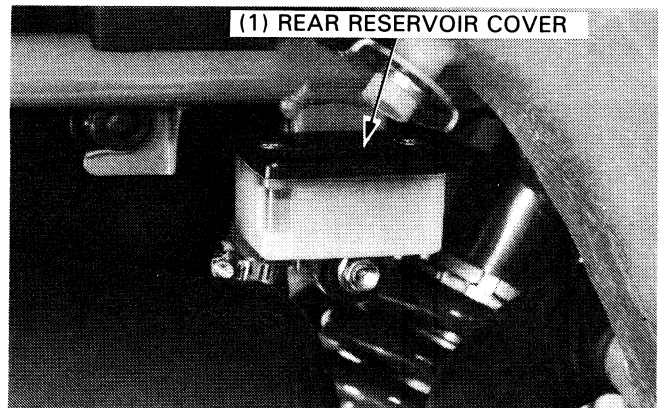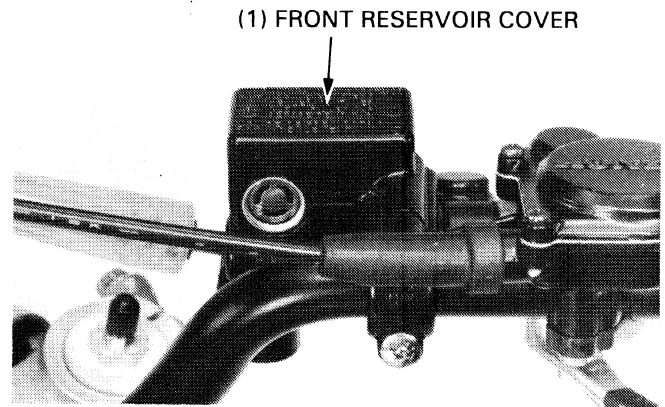

Connect a hose to the bleed valve.

Loosen the caliper bleed valve and pump the brake lever (or pedal) until no more fluid flows out of the bleed valve.

Close the bleed valve.

