

HYDRAULIC BRAKES

BRAKE PAD REPLACEMENT

NOTE

- Always replace the brake pads in pairs to assure even disc pressure.
- Always use new pads with marks "N18FF" (FRONT) and "TT2202FF" ('85: REAR) or "N18FF" (After '85: REAR) on the pads.

FRONT BRAKE

'85 only:



Raise the front wheel off the ground by placing a block or safety stand under the skid plate.

Remove the wheel nuts.

'85 and after:


Remove the pad pin bolt plugs from the caliper.
Loosen the pad pin bolts.

Remove the front caliper mounting bolts.

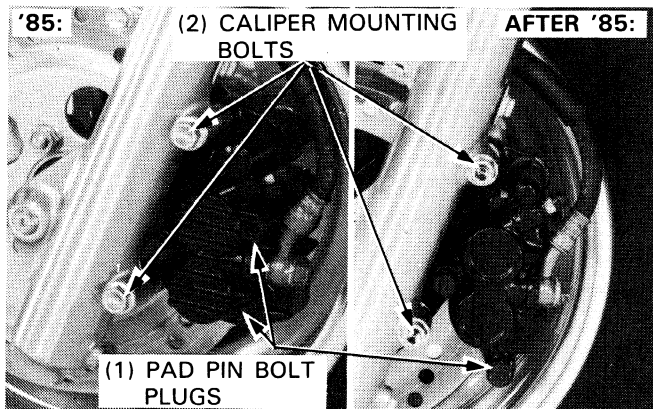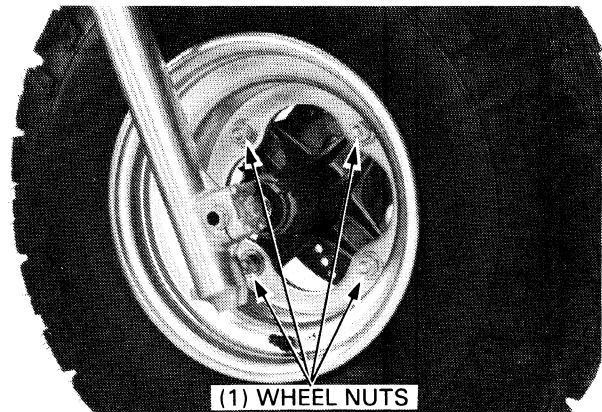

Remove the pad pin bolts and brake pads.

Remove the caliper bracket from the caliper.

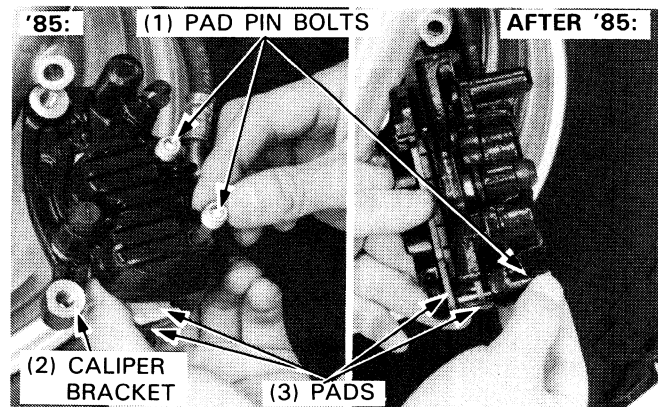

Make sure that the pad spring and retainer clip are installed in the position shown.

