

Loosen the inner axle lock nut (page 12-4).


Remove the disc mount bolts and disc from the disc hub.

Install a new disc on the hub with its "DRIVE" arrow mark facing right.

Tighten the disc mount bolts.

TORQUE: 37–43 N·m (3.7–4.3 kg-m, 27–31 ft-lb)


Tighten the inner axle lock nut (page 12-7).

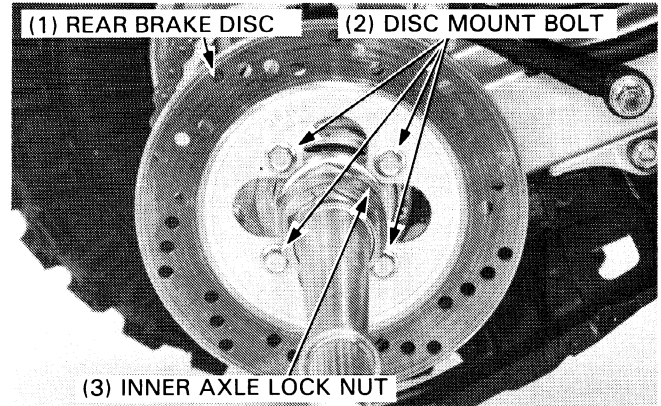

Lower the caliper and tighten the caliper mount bolts.

TORQUE: 20–30 N·m (2.0–3.0 kg-m, 14–22 ft-lb)


Install the right wheel hub (page 12-8) and wheel (page 12-3).

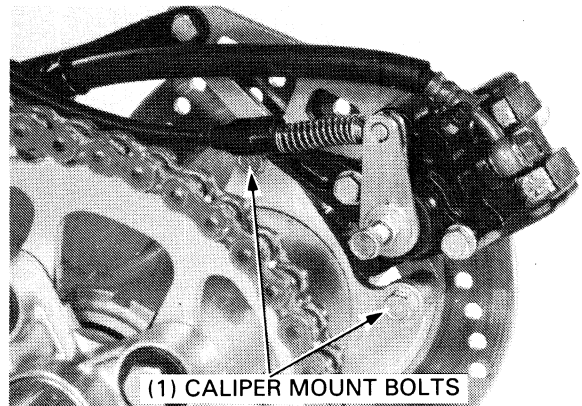

DISC WARPAGE INSPECTION

Measure the each disc for warpage.

SERVICE LIMIT: 0.30 mm (0.012 in)

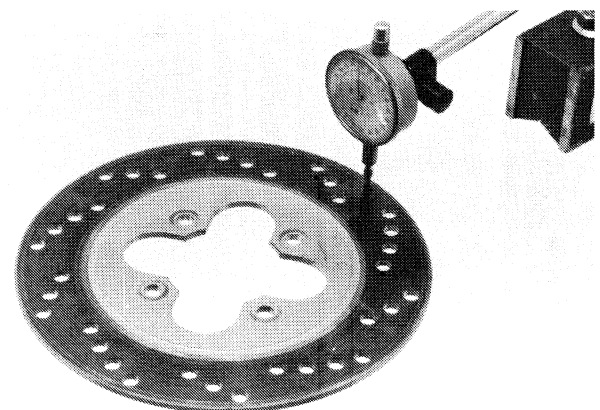

FRONT CALIPER

REMOVAL

Drain the brake fluid from the front hydraulic system.
Remove the oil bolt and brake hose from the caliper.

CAUTION

- *Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.*

Remove the caliper mounting bolts and the caliper from the fork leg.

