

## REAR FENDER/SEAT/EXHAUST SYSTEM


### REMOVAL

Release the seat lock by moving the lever in the direction shown and remove the seat and rear fender.

### INSTALLATION

Apply grease to the seat catch.

Install the seat and fender in the reverse order of removal.

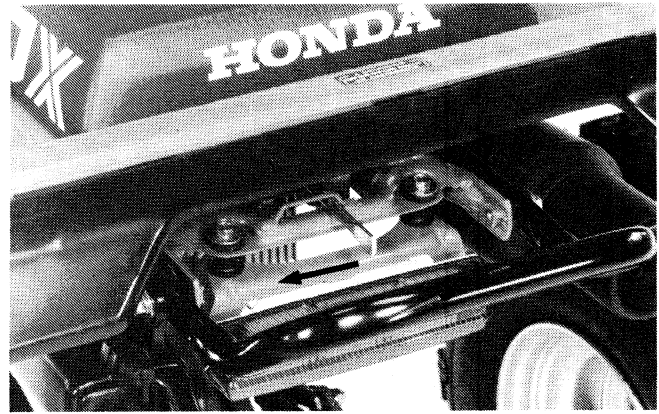

## EXHAUST SYSTEM

### WARNING

- *Do not service the exhaust pipe or muffler while they are hot.*

