

Unit: k Ω

\ominus \ \oplus	BLACK/ WHITE (SW)	GREEN (E)	BLACK/RED (EXT)	GREEN/ WHITE (E)	BLUE/ YELLOW (PC)	BLACK/ YELLOW (IGN)
BLACK/WHITE (SW)		∞	∞	∞	∞	∞
GREEN (E)	1–100		∞	0	1–100	500–5,000
BLACK/RED (EXT)	1–100	50–500		50–500	50–1,000	500–5,000
GREEN/WHITE (E)	1–100	0	∞		1–100	500–5,000
BLUE/YELLOW (PC)	5–500	5–500	∞	5–500		800– ∞
BLACK/YELLOW (IGN)	∞	∞	∞	∞	∞	


PULSE GENERATOR

Remove the seat/rear fender.

Disconnect the pulse generator wire coupler.
Measure the pulse generator coil resistance between the coupler terminals.

PULSE GENERATOR COIL RESISTANCE: 297–363 Ω

For pulse generator coil replacement, refer to section 7.

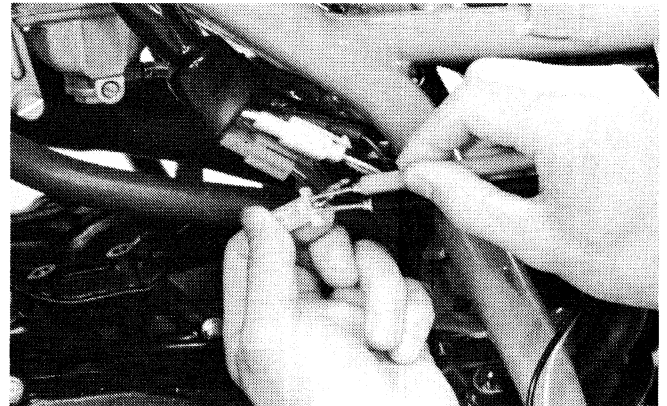


LIGHTS

Apply the parking brake and start the engine.

Check the headlight and taillight by operating the headlight ON-OFF switch.

Operate the dimmer switch and check the headlight vertical beam.

Adjust the vertical beam by turning the adjusting screws.

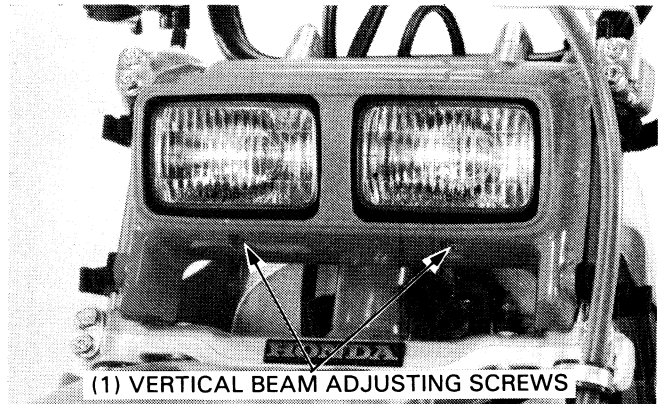

HEADLIGHT BULB REPLACEMENT

Remove the headlight case from the front fork tubes by releasing the four retaining bands.

