


Remove the taillight bulb by pushing it in and turning it counterclockwise. Replace the faulty bulb with a new one.

Install the removed parts in the reverse order of removal.

#### NOTE

- Make sure that the taillight lens rubber seal is in good condition.
- Be sure to install the washers on both side of the rubber mount.

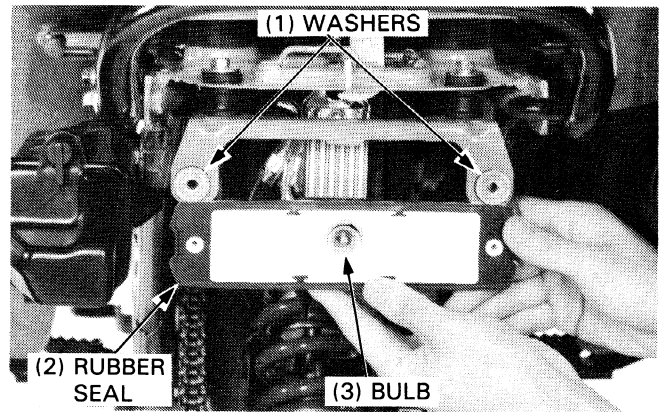


### ALTERNATOR LIGHTING COIL

Remove the seat/rear fender.

Disconnect the alternator lighting coil coupler. Measure the lighting coil resistance between the coupler terminals.

**RESISTANCE: 0.1–1.0  $\Omega$  (ND), 0.2–1.0  $\Omega$  (MITSUBA)**

For alternator replacement, refer to section 7.

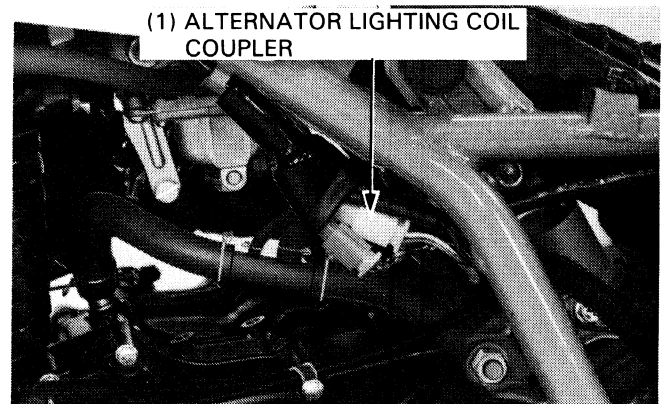


### AC REGULATOR

Disconnect the lighting switch coupler:

Start the engine and measure the voltage between the white/yellow and green wire terminals at the main harness side of the coupler.

**VOLTAGE: 13.5–14.5 V**

If the voltage is not within specifications, check the AC regulator.

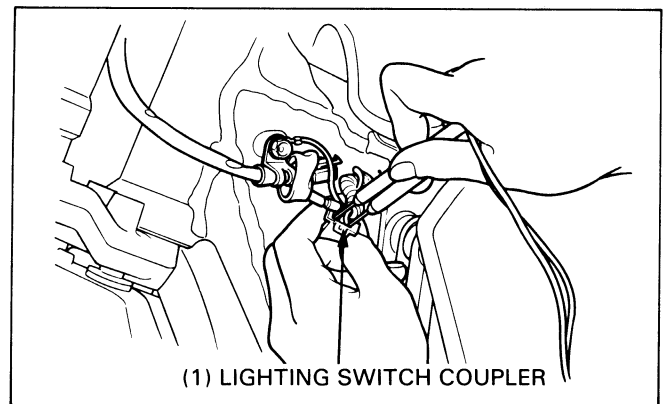

Remove the seat/rear fender.

Disconnect the AC regulator wire connectors, and remove the regulator attaching bolt and the regulator.

