


ELECTRICAL SYSTEM

Measure the resistance between the wire terminals.

RESISTANCE: 100 k Ω — ∞

Replace the AC regulator with a new one if the resistance is not within the specifications.

Install the regulator in the reverse order of removal.

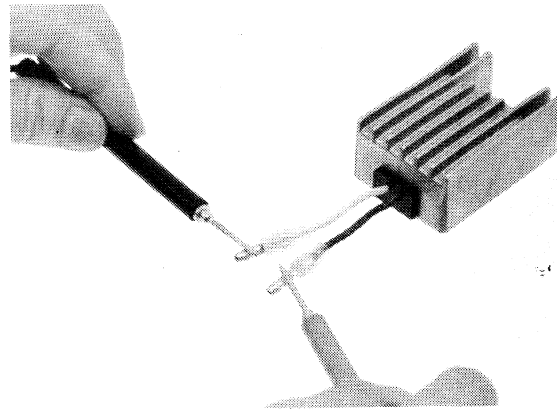


SWITCHES

NOTE

- The engine stop switch, lighting switch and dimmer switch must be replaced as an assembly.

Remove the headlight case and disconnect the engine stop switch/lighting switch wire coupler and connector.

Continuity should exist between the color coded wires in each chart.

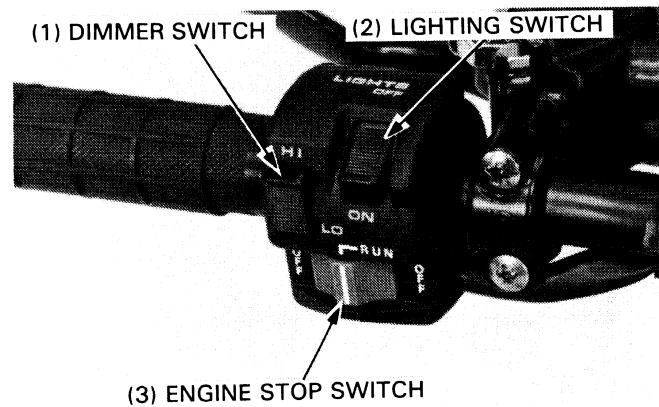

ENGINE STOP SWITCH

COLOR CODE	BLACK/ WHITE	GREEN
SWITCH POSITION		
OFF	○	○
RUN		

LIGHTING STOP SWITCH

COLOR CODE	WHITE/ YELLOW	BROWN
SWITCH POSITION		
OFF		
ON	○	○

DIMMER SWITCH

COLOR CODE	BROWN	BLUE	WHITE
SWITCH POSITION			
HI	○	○	
(N)	○	○	○
Lo	○		○

