



## Maintenance Schedule

Items	Frequency *1											Regular Replace	Refer to page		
	× 1,000 mi	0.6	4	8	12	16	20	24	28	32	36				
	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	44.8	51.2	57.6				
Fuel Line			I	I	I	I	I	I	I	I	I	I	I		
Throttle Operation			I	I	I	I	I	I	I	I	I	I	I		96
Air Cleaner *2			I	I	I	I	I	I	I	I	I	I	I		74, 84
Crankcase Breather *3			C	C	C	C	C	C	C	C	C	C	C		97
Spark Plug			I	R	I	R	I	R	I	R	I	R	I		79
Valve Clearance			I	I	I	I	I	I	I	I	I	I	I		-
Engine Oil			R	R	R	R	R	R	R	R	R	R	R	1 Year	82
Engine Oil Strainer Screen				C		C		C		C		C			-
Engine Oil Centrifugal Filter				C		C		C		C		C			-
Engine Idle Speed			I	I	I	I	I	I	I	I	I	I	I		-
Evaporative Emission Control System *4					I			I		I		I			-

### Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 138).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

### Maintenance Legend

**I** : Inspect (clean, adjust, lubricate, or replace, if necessary)  
**L** : Lubricate  
**R** : Replace  
**C** : Clean