

## Display Setting

You can adjust the two settings.

- Clock setting
- Changing of mileage unit

Ordinary display



Display setting

Clock setting



Changing of mileage unit



Press and hold [A] button and [B] button

Press [A] button

## To set the clock:

- 1 Turn the ignition switch on.
- 2 Press and hold [A] and [B] buttons until the hour digits start flashing.

→

- 3 Press [B] button until the desired hour and AM/PM are displayed.

► Press and hold to advance the hour fast.

→

- 4 Press [A] button. The minute digits start flashing.

→