

## Changing the mileage unit:

- 1 After clock setting, the mileage unit start flashing.
- 2 Press **B** button to select either km or mile.
- 3 Press and hold **A** and **B** buttons until the display stops flashing. The mileage unit is set.
  - ▶ The setting can also be set by turning the ignition switch off.
  - ▶ The display will stop flashing automatically and the setting will be cancelled if the button is not pressed for about 30 seconds.