









Maintenance Schedule

Items		Frequency	Odometer Reading*1							Refer to page	
			× 1,000 mi	0.6	4	8	12	16	20		24
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-related Items	Fuel Line					I		I		I	-
	Throttle Operation					I		I		I	74
	Air Cleaner*2						I			I	64
	Crankcase Breather*3				C	C	C	C	C	C	75
	Spark Plug				I	R	I	R	I	R	58
	Valve Clearance					I		I		I	-
	Engine Oil			R	R	R	R	R	R	R	60
	Engine Oil Filter			R		R		R		R	62
	Engine Idle Speed				I			I		I	-
	Secondary Air Supply System					I		I		I	-
	Evaporative Emission Control System*4							I		I	-

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual ([▶ P. 116](#)).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.