

4. Thoroughly clean the inside of the air cleaner housing.
 5. Install the air cleaner element.
 6. Install the parts in the reverse order of removal.
-