


Crankcase Breather


1. Place a drain pan under the crankcase breather tube.
2. Remove the crankcase breather tube plug and drain deposits.
3. Reinstall the plug.

Front

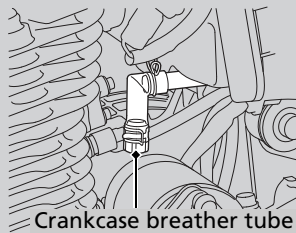

Crankcase breather tube plug

Rear

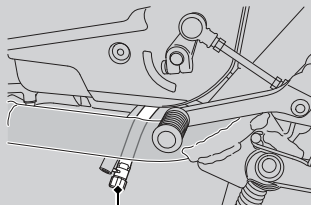

Crankcase breather tube plug