

Troubleshooting

Engine Will Not Start	P. 81	Burned-out Light Bulb	P. 93
Overheating (High oil temperature indicator is on)	P. 82	Blown Fuse	P. 97
Warning Indicators on or Flashing	P. 83		
Low Oil Pressure Indicator.....	P. 83		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL)	P. 83		
ABS (Anti-lock Brake System) Indicator			
(CB1100A only)	P. 84		
Tire Puncture	P. 85		
Electrical Trouble	P. 93		
Battery Goes Dead.....	P. 93		