

# Engine Will Not Start


## I Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence [▶ P. 28](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

## I Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is  (Run) position [▶ P. 28](#)
- Check for a blown fuse [▶ P. 97](#)
- Check for a loose battery connection or battery terminal corrosion [▶ P. 44](#)
- Check the condition of the battery [▶ P. 93](#)

If the problem continues, have your motorcycle inspected by your dealer.