


## Rear Wheel

### Removal

1. Park your motorcycle on its center stand on a firm, level surface.
2. Loosen the rear axle nut and adjusting bolts so the rear wheel can be moved all the way forward for maximum drive chain slack.
3. Remove the rear axle nut/washer.

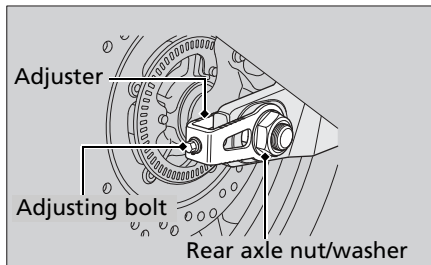

4. Remove the drive chain from the rear wheel sprocket by pushing the rear wheel forward.
5. Remove the rear axle shaft, adjusters, and adjusting bolts.

