


1. Remove the screws from the headlight case.
2. Gently pull the lower end of the headlight forward and remove the headlight.
3. Disconnect the connector by pressing tabs.
4. Remove the seat rubber.
5. Press the bulb retainer down and pull out the bulb without turning it.
6. Install a new bulb and parts in the reverse order of removal.
 - Install the seat rubber with its "TOP" mark facing up.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.

► Brake/Tail Light Bulb

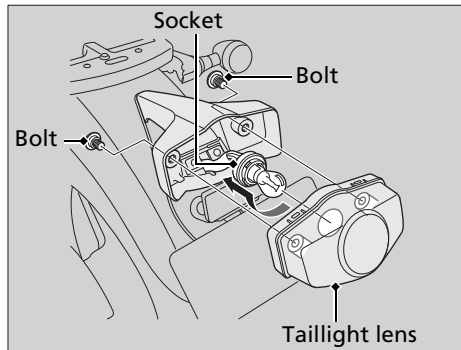

1. Remove the taillight lens by removing the bolts.
2. Turn the socket counterclockwise, then pull it out.