ADJUST mode

Following items can be changed sequentially.

- Time format setting
- Clock setting
- Backlight brightness adjustment
- Activating/deactivating of tripmeter A, average fuel mileage, fuel consumption, average speed and elapsed time automatic reset mode
- Changing the speed and mileage unit
- Changing the coolant temperature gauge unit
- Changing the fuel mileage meter unit (only when km unit system is selected)
- Press and hold the SEL ▲ (up) or the SEL

 (down) button and the MODE button
- Press the **MODE** button

