


## Adjusting the Front Suspension

### Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Turn the adjuster using a 6 mm Hex wrench. The spring preload adjuster has 20 turns from the full soft position.

Turn clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft). The standard position is the 7 turns from the full soft position.

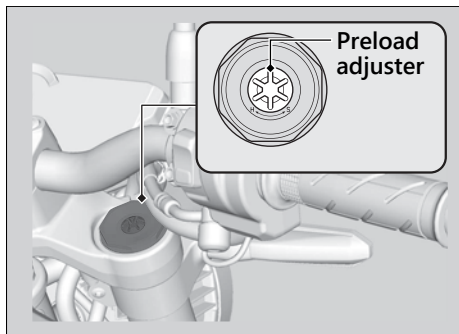

#### NOTICE

Do not turn the adjuster beyond its limits.