

Troubleshooting

Engine Will Not Start	P. 122	Burned-out Light Bulb	P. 135
Overheating (High coolant temperature indicator is on)	P. 123	Blown Fuse.....	P. 138
Warning Indicators On or Flashing	P. 124		
Low Oil Pressure Indicator	P. 124		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 124		
ABS (Anti-lock Brake System) Indicator	P. 125		
Torque Control Indicator.....	P. 126		
Other Warning Indications	P. 127		
Fuel Gauge Failure Indication.....	P. 127		
Tire Puncture	P. 128		
Electrical Trouble	P. 135		
Battery Goes Dead.....	P. 135		