

Gauges, Indicators & Displays

7	RESET button	Use this button for the following purposes: <ul style="list-style-type: none">• To reset the tripmeter A & B (page 29)• To select brightness of the display (page 30).• To adjust time (page 31)• To change unit of the speedometer, odometer and tripmeter (page 34)• To change unit of the temperature meter (page 35)
8	high beam indicator (blue)	Lights when the headlight is on high beam.
9	neutral indicator (green)	Lights when the transmission is in neutral.
10	low oil pressure indicator (red)	Lights when engine oil pressure is low enough to cause engine damage. If the low oil pressure indicator lights during operation, pull safely to the side of the road. See page 203 for instructions and cautions. <i>Lamp Check</i> .