

Gauges, Indicators & Displays

Overheating Message:

When the coolant temperature reaches 251°F (122°C), the numbers in the temperature display start flashing and the high coolant temperature indicator (2) comes on. If this occurs, stop the engine and check the reserve tank coolant level. Read pages 111— 114 and do not ride the motorcycle until the problem has been corrected.


NOTICE

Continuing to ride with an overheated engine can cause serious engine damage.

< Fahrenheit (°F) >



< Centigrade (°C) >

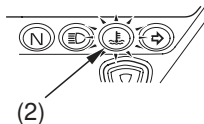

(2) high coolant temperature indicator