


## Digital Clock

The digital clock (1) shows the hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Select the brightness of the display (page 30).
3. The clock will be set in the adjust mode with the hour display flashing.

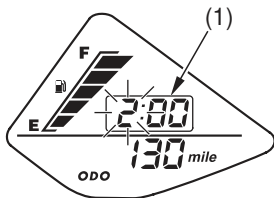

(1) digital clock

(cont'd)