

Maintenance Schedule

ITEMS		FREQUENCY	NOTE	ODOMETER READING (Note 1)							Refer to page	
				× 1,000 mi	0.6	4	8	12	16	20		24
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
NON-EMISSION-RELATED ITEMS		DRIVE CHAIN			EVERY 500 mi (800 km) I, L							150
		BRAKE FLUID	5			I	I	R	I	I	R	134
		BRAKE PADS WEAR				I	I	I	I	I	I	137
		BRAKE SYSTEM			I		I		I		I	133
	*	BRAKELIGHT SWITCH					I		I		I	—
	*	HEADLIGHT AIM					I		I		I	—
		CLUTCH SYSTEM					I		I		I	122
		CLUTCH FLUID	5			I	I	R	I	I	R	123
		SIDE STAND					I		I		I	149
	*	SUSPENSION					I		I		I	—
	*	NUTS, BOLTS, FASTENERS			I		I		I		I	—
	**	WHEELS/TIRES					I		I		I	—
	**	STEERING HEAD BEARINGS			I		I		I		I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page234).

**In the interest of safety, we recommend these items be serviced only by your dealer.