

Seat Removal


Refer to *Safety Precautions* on page 78 .

The rear seat must be removed to access the luggage tie-down straps, helmet holder, tool kit, owner's manual, color label and to remove the front seat.

Rear Seat Removal

To remove the rear seat (1), insert the ignition key (2) into the seat lock (3). Turn it clockwise, then pull the rear seat back and up.

To install the rear seat, insert the prongs (4) into the rear seat stay (5), and then push down on the rear of the rear seat.

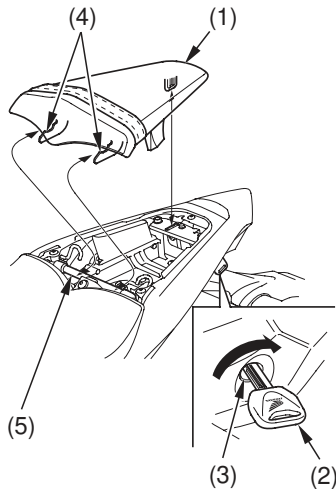

(1) rear seat
(2) ignition key
(3) seat lock

(4) prongs
(5) rear seat stay