


Air Cleaner

Inspection & Cleaning

1. Remove the rear seat and front seat (pages 94 , 95).
2. Remove the left side cover (page 96).
3. Remove the screw (1), bolt (2) and air cleaner cover (3).

LEFT SIDE

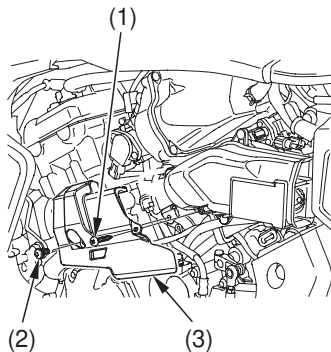

- (1) screw
- (2) bolt
- (3) air cleaner cover