
## **Crankcase Breather**

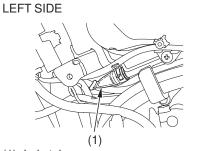

(1) drain tube

- 5. Place a drain pan under the drain tube.
- 6. Remove the tube to drain the deposits in it.
- 7. Reinstall the drain tube.
- 8. Install the removed parts in reverse order of removal.