


## If a Fuse Blows

- Remove the rear seat and front seat (pages 94 , 95 ).

### UNDER FRONT SEAT

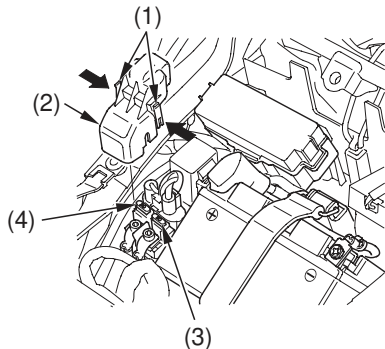


- tabs
- starter motor magnetic switch cover
- main fuse
- FI fuse

### Main Fuse and FI Fuse Access:

- Release the tabs ( 1 ), then remove the starter motor magnetic switch cover ( 2 ).
- To check or replace the main fuse ( 3 ) and FI fuse ( 4 ), pull out the old fuse. Look for a burned wire inside the fuse. If the fuse is blown ( 6 ), replace it with a spare fuse ( 7 ) of the same rating. The spare fuses are located in the fuse box (page 206 ).

### MAIN FUSE, FI FUSE

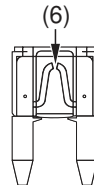

- blown fuse

- Install the starter motor magnetic switch cover.