

Instruments *(Continued)*

3 Changing the speed and mileage unit:

- 1 Press RESET button to select either "mph" and "mile" or "km/h" and "km".

When selecting the "mph" and "mile".

- Fuel mileage unit shows "mile/gal".
- Fuel consumption unit shows "gal".

When selecting the "km/h" and "km".

- Fuel mileage unit shows "km/l".
- Fuel consumption unit shows "l".

- 2 Press SET button. The speed and mileage unit is set, and then the display moves to the changing of the coolant temperature gauge unit.