 


## Clips

The clips must be removed to remove the inner cover.

 
### Removal

1. Press down on the center pin to release the lock.
2. Pull the clip out of the hole.



### Installation

1. Push the bottom of the center pin.
2. Insert the clip into the hole.
3. Press down on the center pin to lock the clip.



## Battery

