

Cleaning the Crankcase Breather

1. Remove the rear seat and front seat.
➤ P. 55, 56
2. Remove the left side cover. ➤ P. 57
3. Remove the air cleaner cover. ➤ P. 64
4. Remove the crankcase breather tube and drain deposits.
5. Reinstall the crankcase breather tube.
6. Install the parts in the reverse order of removal.

