

Troubleshooting

Engine Will Not Start	P. 87	Tire Puncture	P. 91
Overheating (High coolant temperature indicator is on)	P. 88	Electrical Trouble	P. 101
Warning Indicators On or Flashing	P. 89	Battery Goes Dead	P. 101
Low Oil Pressure Indicator	P. 89	Burned-out Light Bulb	P. 101
PGM-FI (Programmed Fuel Injection)		Blown Fuse	P. 102
Malfunction Indicator Lamp (MIL)	P. 89		
ABS (Anti-lock Brake System) Indicator (CB1000R ABS)	P. 90		