

## Cleaning the Crankcase Breather

1. Remove the rear seat and front seat. [▶ P. 55, 56](#)
2. Remove the left side cover. [▶ P. 57](#)
3. Remove the air cleaner cover. [▶ P. 64](#)
4. Remove the crankcase breather tube and drain deposits.
5. Reinstall the crankcase breather tube.
6. Install the parts in the reverse order of removal.

