










| Items | | Frequency *1 | | | | | | | | Refer to page | |
|--|---|---|---|-----|------|------|------|------|------|---------------|----|
| | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | | |
| | | × 1,000 km | 1.0 | 6.4 | 12.8 | 19.2 | 25.6 | 32.0 | 38.4 | | |
| Emission-related Items | Fuel Line |  | | | | I | | I | | I | – |
| | Throttle Operation |  | | | | I | | I | | I | 78 |
| | Air Cleaner *2 | | | | | | R | | | R | 51 |
| | Crankcase Breather *3 | | | C | C | C | C | C | C | C | 79 |
| | Spark Plug | | Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R | | | | | | | | 57 |
| | Valve Clearance |  | | | | | | I | | | – |
| | Engine Oil | | Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R | | | | | | | | 60 |
| | Engine Oil Filter | | | R | | R | | R | | R | 62 |
| | Engine Idle Speed |  | | I | I | I | I | I | I | I | – |
| | Radiator Coolant *5 | | | | | I | | I | | R | 65 |
| | Cooling System |  | | | | I | | I | | I | – |
| | Secondary Air Supply System |  | | | | I | | I | | I | – |
| Evaporative Emission Control System *4 |  | | | | | I | | | I | – | |

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 119).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C** : Clean
- L** : Lubricate
- R** : Replace