

Instruments *(Continued)*

- 1 To change the setting mode B, turn the ignition switch to the ON position while pressing **SEL** button until the display check is finished. The blinking bar segments in the tachometer shows the current REV indicator lighting RPM and the current numerical tachometer setting is displayed.
 - ▶ Tachometer bar segment is displayed as a conventional display, regardless of set up display method.
- 2 Each time **SEL** button is pressed, the lighting RPM set value increase by 250 r/min (rpm) (one segment). When the lighting RPM set value exceeds the allowable range, the lighting RPM set value automatically returns to 4,000 r/min (rpm).
 - ▶ Press and hold **SEL** button to advance the lighting RPM set value quickly.

Available Setting Range

4,000 -to- 10,500 r/min (rpm)