

### Starter Motor Operates But Engine Does Not Start

---


Check the following items:

- Check the correct engine starting sequence ➤ [P. 34](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

---

Check the following items:

- Make sure the engine stop switch is in the  (Run) position ➤ [P. 32](#)
- Make sure the side stand is raised.
- Check for a blown fuse ➤ [P. 105](#)
- Check for a loose battery connection or battery terminal corrosion ➤ [P. 59](#)
- Check the condition of the battery ➤ [P. 100](#)

If the problem continues, have your motorcycle inspected by your dealer.