


Battery

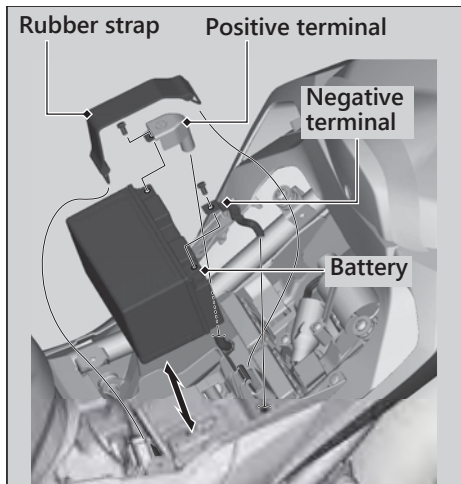

Removal

Make sure the ignition switch is in the OFF position.

1. Remove the front seat. 2 P. 62
2. Unhook the rubber strap from rear side.
3. Disconnect the negative - terminal from the battery.
4. Disconnect the positive + terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive + terminal first. Make sure that bolts and nuts are tight.

Make sure the clock information is correct after the battery is reconnected. 2 P. 25
For proper handling of the battery, see "Maintenance Fundamentals." 2 P. 49
"Battery Goes Dead." 2 P. 102