



← Left turn signal indicator

→ Right turn signal indicator

High beam indicator

N Neutral indicator

Comes on when the transmission is in Neutral.