


## Side Cover

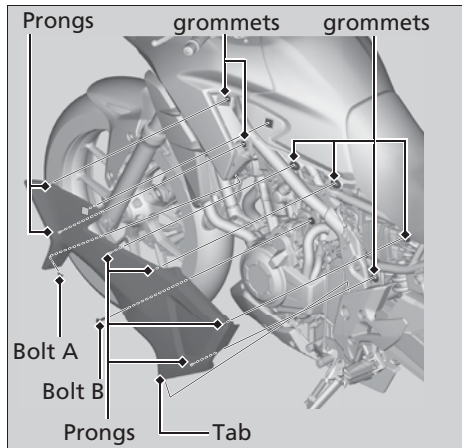

The left side cover must be removed to access the coolant reserve tank cap.  
The right side cover must be removed to access the main fuse.

The right and left side covers can be removed in the same manner.

### Removal

1. Remove the bolt A and bolt B.
2. Remove the prongs from the grommets.
3. Remove the side cover by releasing the tab.

### Installation

Install the parts in the reverse order of removal.